


CAFÉ BANNER

Sizes Available (width)

100cm Cross Rail

150cm Cross Rail

200cm Cross Rail

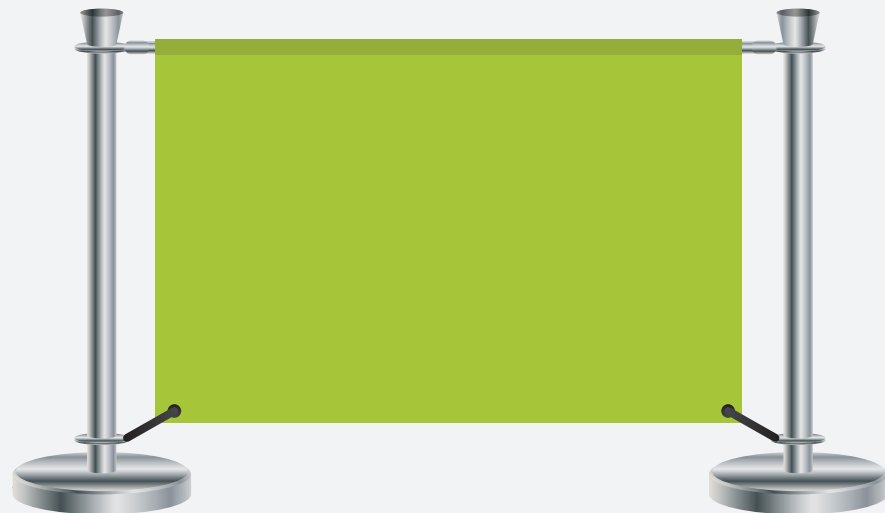

Recommended Media

Singled Sided Aero Mesh 115gsm

Single Sided Display Polyester 215gsm


Double Sided Display Polyester 215gsm

ASSEMBLY INSTRUCTIONS

Remove all products from packaging.


1

Attach the threaded bottom part of the post to the base by aligning it with the central hole, pushing through and tightening with the washer and nut provided.

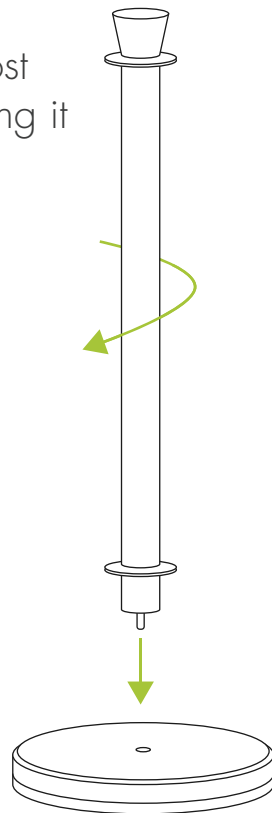

2

To attach your graphic, slide the cross rails(s) through the top and bottom pole pockets on your graphic until central.

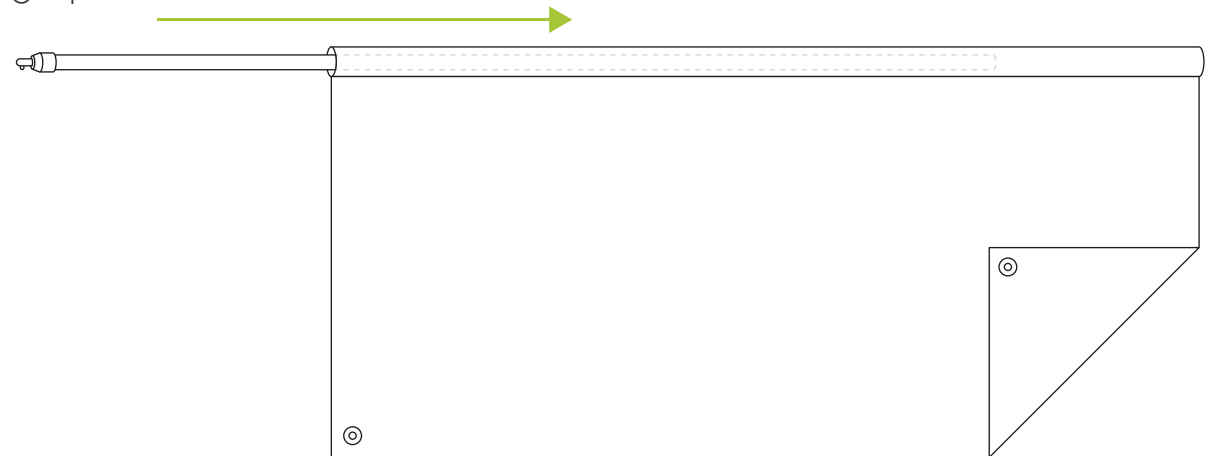


Note: If you are using a cross rail at the top and springs at the bottom, there will be a pocket at the top and eyelets at the bottom.

ASSEMBLY INSTRUCTIONS

3

Slot the hooks on the ends of the cross rails into the holes on the top and bottom of the rings on the poles.

Note: If you are using springs at the bottom, simply attach the eyelets to the bottom of the pole with the elastic provided.

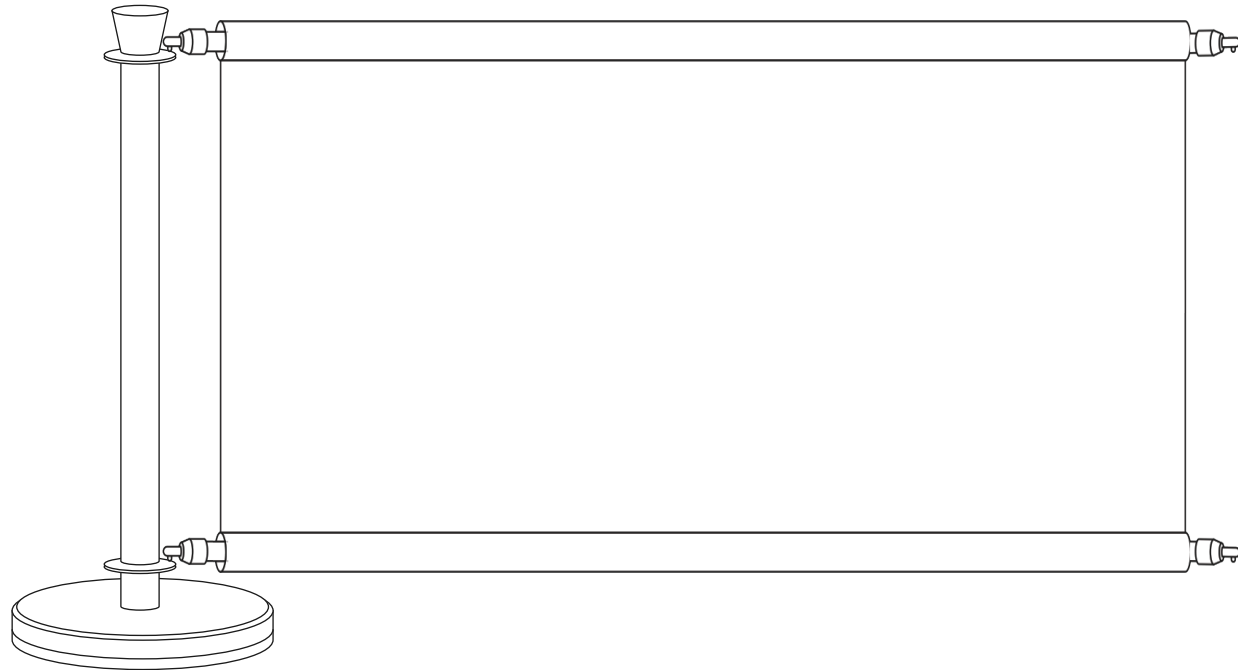

ASSEMBLY INSTRUCTIONS

4

Once the main unit is assembled, repeat the process to form a line of café banners.

