


## // assembly instructions for TFS knock down kits (3m x 2m frame shown)

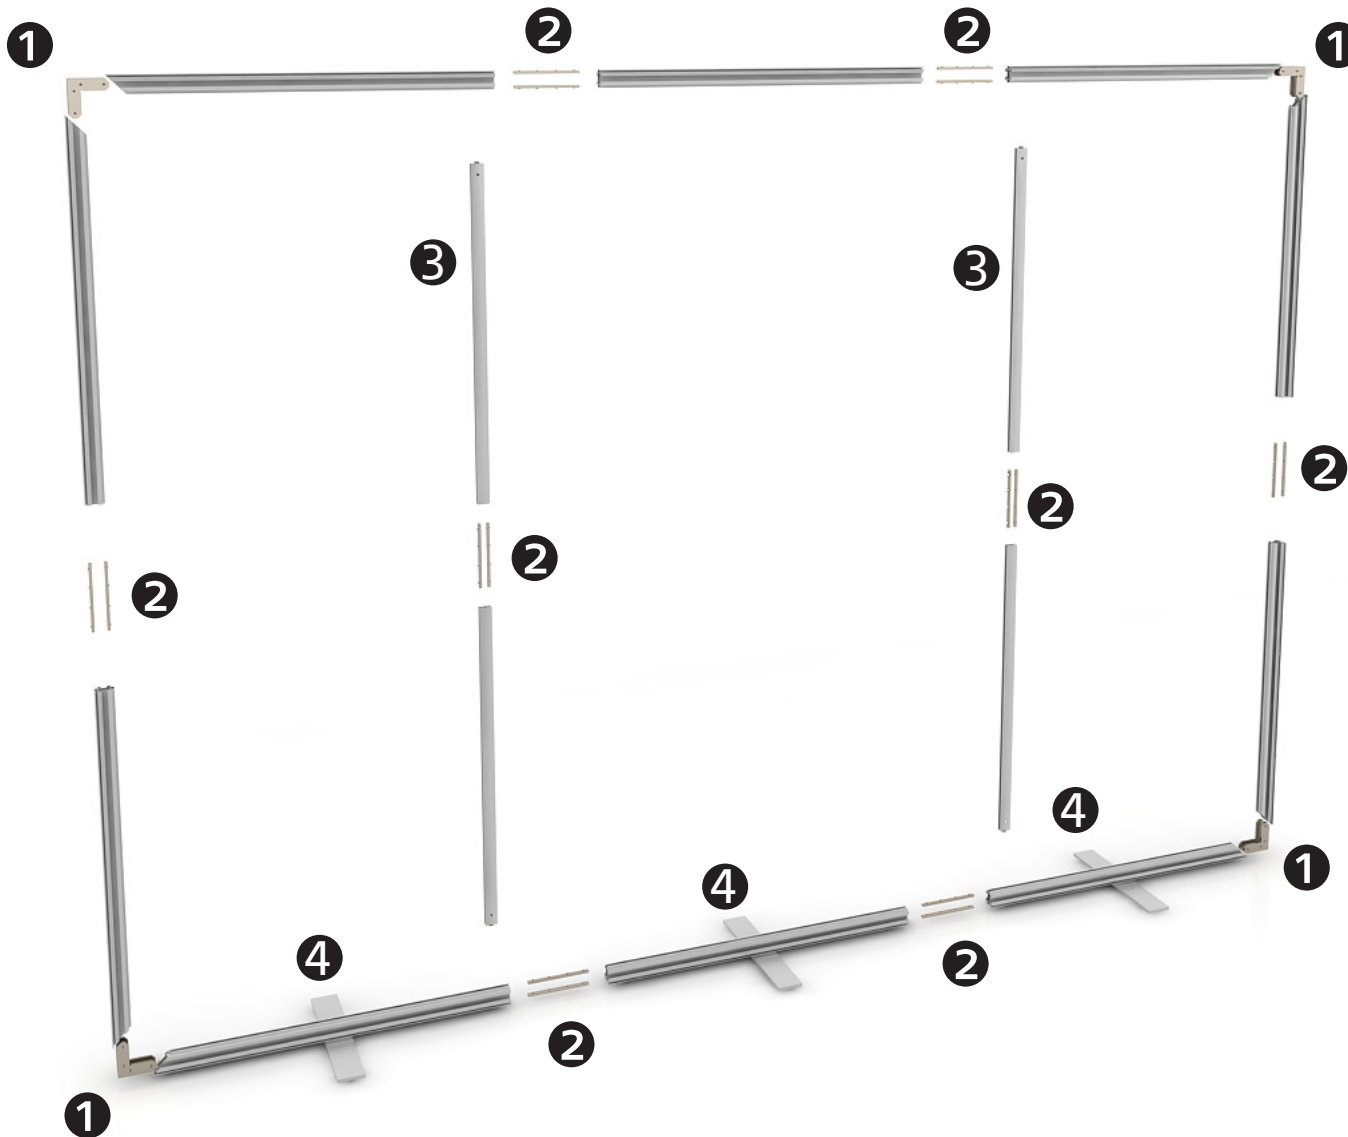

1. Connect aluminium frame together using 90 degree corner brackets and tighten grub screws using 3mm allen key. (Please note that each corner connector comprises of two plates, one blank, the other fitted with grub screws).
2. Insert two extension bars per joint into TFS frame and support bars. Tighten grub screws using 3mm allen key.
3. Support bars to be fitted within frame aperture as shown. Tighten grub screws using 4mm allen key.
4. Fit base plates to underside of frame using M8 countersunk screws and M8 roll nuts (roll nuts to locate into outer TFS channel, tighten using 5mm allen key).